

Synergy™ V

Model RT-U60C/RT-U62C2P



1. Introduction

Your Synergy™ V Universal / DVR remote control is simple to program, easy to use, and can operate up to five (5) electronic devices, which include:

CABLE	Cable set-top terminals
TV	Televisions
VCR	VCR
DVD	DVD
AUDIO	Audio receivers, amplifiers, CD players

Before you can use your remote control, it must be programmed (set-up) to operate the above devices.

2. Before Getting Started

Some of the special features and buttons on your remote control are as follows

Point and Press® Programming

Using the Code Entry Programming method described in Section 5, enter, lock and test each 3-digit VCR Setup Code for your brand until a code is found that operates the VCR transport functions (PLAY, STOP, REW, FWD, PAUSE, REC) of your TV /VCR unit.

Before you can test for the correct DVD setup code, you must first press the [MODE] button, then [DVD] button to put the remote in its DVD mode.

3. Installing / Replacing Batteries

Install two (2) new AA Alkaline batteries. Properly match the "+" / "-" ends of the batteries with the diagram in the battery compartment.

2

1. Introduction

Your Synergy™ V Universal / DVR remote control is simple to program, easy to use, and can operate up to five (5) electronic devices, which include:

CABLE	Cable set-top terminals
TV	Televisions
VCR	VCR
DVD	DVD
AUDIO	Audio receivers, amplifiers, CD players

Before you can use your remote control, it must be programmed (set-up) to operate the above devices.

2. Before Getting Started

Some of the special features and buttons on your remote control are as follows

Point and Press® Programming

Using the Code Entry Programming method described in Section 5, enter, lock and test each 3-digit VCR Setup Code for your brand until a code is found that operates the VCR transport functions (PLAY, STOP, REW, FWD, PAUSE, REC) of your TV /VCR unit.

Before you can test for the correct DVD setup code, you must first press the [MODE] button, then [DVD] button to put the remote in its DVD mode.

3. Installing / Replacing Batteries

Install two (2) new AA Alkaline batteries. Properly match the "+" / "-" ends of the batteries with the diagram in the battery compartment.

2

Synergy™ V RT-U60C / RT-U62C2P					
Amak	023	215			
Amstrad	157				
Anam	217	218	219	220	221
	222	223			
AOC	053				
Apex	030	038			
Audiovox	220				
Belcor	073				
Bell & Howell	211				
Broksonic	165	167			
Brokwood	073				
Candle	068	091			
Centurion	095	107	108		
Citizen	069	091	211	233	
Concerto	073	065			
Contac	147				
Coronado	023				
Craig	223				
Crown	026				
Curtis Mathes	013	054	107	108	211
	213				
Daewoo	051	068	073	095	158
	159	189	191	194	196
	197	198	200	202	204
	205	206	207	209	
Daytron	073	095	107	108	
Dumont	073				
Electro Home	073	095			
Elektra	353				
Emerson	016	023	053	054	103
	139	158	159	164	165
	166	167	168	169	392
	400	401	402	408	415
	073	095			
Envision	047				
Fisher	355	356			
Funai	015	018	042	044	049
GE	054	055	068	073	090
	095	101	102	103	389
	390	396	403	406	407
	023	048	053	068	073
	8				

Synergy™ V RT-U60C / RT-U62C2P					
Goldstar (LG)	023	053	068	073	090
	107	108	233	360	361
Grundig	233				
Hall Mark	073	095			
Hitachi	023	068	095	096	097
	098	099	100		
Inkel	364				
JC Penney	039	053	068	073	092
	095	102	355		
JVC	104	105	106	396	397
	410				
Kawasho	073	095			
KMC	023	053	233	366	
KTV	211	213			
Kurazai	023	053	068	073	090
LG (Goldstar)	107	108	233	360	361
	211	213			
Lodgenet	211	213			
Logik	211	213			
Luxman	068	073	095		
LXI	024	026	157		
Magnavox (Philips)	023	068	071	073	069
	090	091	093	134	385
	387	397	404		
	211	213			
Majestic	053	107	108	109	
Marantz	215				
Megatron	090	211	213	355	388
Memorex	405				
MGA/Mitsubishi	053	068	073	090	095
	107	109	110	216	384
	394	395	398	399	417
	022	023	025	053	071
	072	138	211	213	
NEC	028	068	080	108	200
Orion	019	159	160	161	162
	163	382			
Panasonic	042	043	044	045	046
Philco	023	053	068	071	072
	9				

Synergy™ V RT-U60C / RT-U62C2P					
Harman Kardon	315				
JVC	297				
Kenwood	311	176	274	289	299
Kroi	176				
LG (Goldstar)	037	084	119	296	
Magnavox (Philips)	037				
Mission	136				
Mitsubishi	245	249			
NAD	192	231	290		
Nakamichi	264	319			
NEC	225				
NSM	176				
Onkyo	300				
Panasonic	144	266			
Philips (Magnavox)	037	094	119	296	
Pioneer	116	127			
Quasar	184				
Radio Shack	186	190	266	279	289
RCA	295				
Sanyo	230	309			
SAE	176				
Scott	186				
Sharp	288	289			
Sony	067	292	293		
Soundesign	148	242	311	320	
STS	318				
Sylvania	084				
Teac	186				
Technics	184	208	317		
Toshiba	290				
Yamaha	280				
	Receiver / Amplifier				
Adcom	325				
Alwa	301				
Akai	142				
Bose	302				
Carver	155	180			
Denon	262	307			
	15				

22

Synergy™ V RT-U60C / RT-U62C2P					
Philips(Magnavox)	091				
	023	068	071	073	089
	090	091	093	134	385
	387	397	404		
Pilot	073	094	233		
Pioneer	111	144	383		
Portland	023	068			
ProScan	055	070			
Proton	090	371	372		
Pulsar	073				
Quasar	044				
Radio Shack	073				
Realistic	022	166	168		
RCA	042	052	053	054	055
	069	070	416		
Sampo	090	108			
Samsung	015	016	017	023	031
	090	107	108	134	147
	151	153	386	411	
Sansui	423				
Sanyo	353	355	356	376	377
Scott	090	108	168		
Sears	023	031	038	039	068
	033	355	356		
Sharp	016	022	023	024	025
	026	027	028	029	393
	395	409			
Signature 2000	023	026	108	211	213
Sony	044	020	021		
Soundesign	091				
Squareview	157				
Supra-Macy	380				
Sylvania	068	071	072	090	091
	093	107	108	157	158
	419				
Symphonic	047	157			
Tallurg	044				
Techwood	068				
Teknika	023	068	072	091	168
	213				
Telerent	023	213			
	3				

Synergy™ V RT-U60C / RT-U62C2P					
Tera	381				
Tevion	065	414			
TMK	068	090			
Toshiba	030	031	038	039	
Totevision	233				
Universal	068	102			
Videch	068				
Wards	068	090			
White Westinghouse	211	408			
XR-1000	213				
Yamaha	068				
York	090	108			
Zenith	047	048	049	050	051
	391	405	406		
	4				

Synergy™ V RT-U60C / RT-U62C2P					
GE	086	172	174		
Go Video	348	349	350		
Goldstar (LG)	247	331			
Harman Kardon	291				
Hitachi	078	132			
Instant Replay	086				
JC Penney	078	086	172	238	291
JCL	086				
JVC	120	128	243	247	250
	253				
Kenwood	120	132	238	243	247
LG (Goldstar)	247	331			
Lloyd	132				
Logik	367				
LXI	132	331			
Magnavox (Philips)	086	132	183		
Marantz	086	172	183	238	247
	291				
Marta	331				
Matsui	368				
Memorex	132	238	331	363	369
	370				
Mitsubishi	255	258			
MTG	132	172			
Montgomery Ward	066	170	173	373	
Multi Tech	132	172	367		
NEC	120	238	243	291	374
	375				
Orion	322	326	327	328	329
	330				
Panasonic	112	117			
Pentax	078				
Philco	086	132	183		
Philips (Magnavox)	086	132	183		
Pioneer	078	120	263		
Portland	345				
ProScan	170	174			
Quartz	238	378			
Quasar	112				
RCA	078	132	141	170	172
	173	174			
	12				

Synergy™ V RT-U60C / RT-U62C2P					
Realistic	066	132	238	363	
Samsung	269	271	275	276	278
Sansui	120	367	379		
Sanyo	238	346	357	363	
Scott	033	332	367		
Sears	035	078	238	331	363
Sharp	066	075			
Shintom	367				
Signature 2000	066	170	173	373	
Sony	056	058	060		
Soundesign	132				
Sylvania	066	132	141	183	184
	322	324	420		
Symphonic	132				
Tandy	132				
Tashiko	132	238			
Tatung	331				
Teac	132	243			
Technics	086				
Teknika	132	331	359		
Thomas	132				
TMK	338				
Toshiba	033	035	078	081	
Totevision	172	331			
Unitech	172				
Vector Research	291				
Video Concepts	132	291			
Wards	066	132	172	247	331
XR-1000	367				
Yamaha	132	243	291		
Zenith	058	120	122	128	132
	13				

23

Synergy™ V RT-U60C / RT-U62C2P					
Philips(Magnavox)	091				
	023	068	071	073	089
	090	091	093	134	385
	387	397	404		
Pilot	073	094	233		
Pioneer	111	144	383		
Portland	023	068			
ProScan	055	070			
Proton	090	371	372		
Pulsar	073				
Quasar	044				
Radio Shack	073				